


HC-3

Auto Coupler

(formerly sold as the AC-3a)

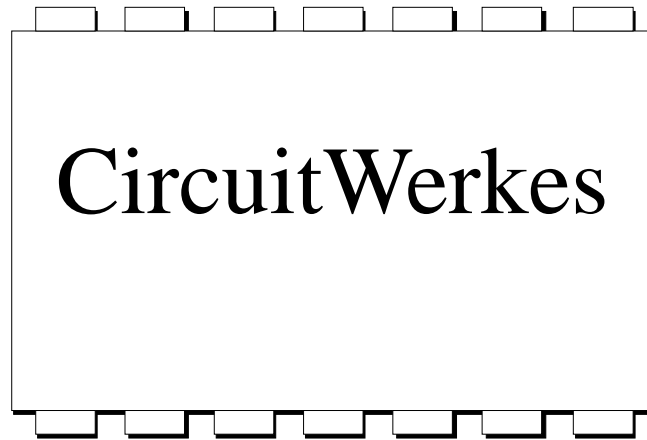

Technical Manual

CircuitWerkes, Inc.
(352) 335-6555 · Fax (352) 380-0230
Internet - <http://www.circuitwerkes.com/>
2805 NW 6th Street · Gainesville, FL 32609 USA

Contents

INTRODUCTION	3
SPECIFICATIONS	3
CONNECTIONS	4
DESCRIPTION OF CONNECTIONS:	4
BOARD LAYOUT	4
OPERATION	6
TROUBLESHOOTING	6
HC-3 SCHEMATIC DIAGRAM	7
RINGS, BEEPS, AND SUCH	8
APPENDIX A	9
OPTIONS FOR THE HC-3	9
REPAIR OR SERVICE INFORMATION	10
CIRCUITWERKES LIMITED WARRANTY	10

This manual covers the HC-3, formerly known as the AC-3a. This manual does not cover the original AC-3. Technical manuals for all CircuitWerkes current (& many older) products are available via the Internet at <http://www.circuitwerkes.com/>. E-mail links and product info can be found there as well.

INTRODUCTION

Thank you for buying the CircuitWerkes HC-3 autocoupler.

The HC-3 is a hybrid autocoupler with provisions for remotely controlling and monitoring its functions. The integral analog hybrid provides for some separation of incoming and outgoing audio. Built-in active audio limiting on the send line keeps outbound levels from exceeding -9 dBm into the phone line while keeping average levels high. Normally open relay contacts (K2 on the terminal strip) close when the unit picks up for tripping external play devices or as an on-line indicator.

SPECIFICATIONS

Power : Supplied wall transformer or other 12 volt or higher (AC or DC) supply.

Polarity is unimportant. Online current draw <100mA. Offline current draw is approx.. 20mA.

Audio In: Active balanced 50k input impedance.

Audio Out: Low impedance (approx 250 Ohm) active balanced output with approximately 10dB of gain over normal phone line levels (which brings the output level up to about 0dBm on peaks).

Relay contacts: The N.O. contacts from SIP relay K2 close upon pickup (jumper J3 selects whether the closure is momentary or latching for the duration of the call) and are good for 10VA up to 30 volts. Higher voltages or currents should be slaved to a suitably large relay. If you slave a big relay off K2's contacts be sure to use a snuffer diode so the inductive kick from the coil of the slave relay won't weld K2's contacts.

QUICK SETUP:

Connect power and audio connections to the appropriate terminals. (a diagram and descriptions can be found on the next several pages of this manual). Set J1 for how many rings on which the unit will answer. ***If you change jumpers on the HC-3, you must put the coupler on line one time or reset the power to the coupler before the changes will take effect.*** Call the HC-3. While on-line with it, push S1 and adjust vr-2, the audio in level pot for a comfortable listening level. With a small screw driver and an audio meter or amplified speaker connected at the aud. out terminals, adjust vr1, the "null" pot for minimum audio on the speaker or meter. Note: vr1 is factory adjusted and will probably work just fine without adjusting, if desired, especially if audio will only be sent in one direction at a time. Your unit is now ready to couple audio to/from the phone line. Detailed setup and connection instructions can be found on pages 4 through 6 of this manual.

Note: When connecting unbalanced audio into the HC-3, we suggest feeding the (-) input and grounding the (+) input.

When connecting the output to an unbalanced load, you can connect the load from either output to ground. You should not ground the unused output. Doing so may decrease output performance and may cause excessive heating of the output circuits.

- 6) Input Level Control. Single turn pot. Adjust for best audio level or clarity.
- 7) Hybrid Null. Should be adjusted upon initial installation. Built in tone generator makes setting the null easy. See "Hybrid Null," on page 6.
- 8) RJ-11. Telco connection here. Center two conductors are tip and ring. Any standard/generic line cord (like the one we provide) will work fine. Normal dial-up "Loop Start" lines only. Ground start PBX telephone lines are not directly compatible with autocouplers. If you are hooking the HC-3 up to a PBX analog extension (an analog extension from a telephone system that emulates a normal dial-up phone line) you may want to read about the CircuitWerkes CP-1 in the Options section at the end of this manual. If you are in an area prone to lightning you should consider telephone line surge suppression. CircuitWerkes warranty does not cover lightning damaged equipment.
- 9) Ring Thru / Pickup enable. This pair of contacts must be shorted (normally jumpered by J4 just behind the terminal strip) for the unit to detect incoming rings. The contacts must also be shorted for the HC-3 to detect line current. If line current detection is interrupted during a call, the coupler will hang up. A remote mounted switch attached to these two conductors could be used to control whether the coupler answers and to force a hangup of an already-answered call. The pin labelled 'p' is the microprocessor pull-up while the pin labelled 'c' is the collector of the ring/line optocoupler.
 - 9a) Jumper J4 closes the pickup line to the CPU, enabling the HC-3 to answer normal calls. See above.
- 10) Manual pick up. Connected in parallel to S1 (behind the terminal strip), these two conductors can be shorted while the unit is OFF Line to initiate an instant pick up. On stock HC-3 units (No ComboLok installed) this switch also initiates a ten-second tone output for nulling purposes if the unit is ONLINE when the terminals are shorted.
- 11) Ring/Online Ground sink. Jumper J5 controls the behavior of this terminal. When J5 is in the "R" position, the sink will go low when the phone line is ringing and when the coupler is online. When J5 is in the O/L position, the sink will occur only when the coupler is online.
- 12) Call end. A momentary ground sink that occurs at the end of each call.
- 13) Ring select J1. Jumper positions for setting how many rings the HC-3 should answer on. Unit comes factory strapped to answer after the second ring.
- 14) AUX L/M J2. Jumper position for selecting momentary or latching action on AUX relay, K2. If jumper shorted, K2 is momentary and closes for about 200 milliseconds just after a call is picked up. If J2 is open, K2's contacts close upon pickup and remain closed until the unit hangs up.
- 15) Beep Enable J3. This jumper can be removed if you wish to have no beeps. If the jumper is left on, beeps will occur at pickup.
- 16) ComboLok LEDs. Not active unless ComboLok equipped.
- 17) S1. Manual pick-up & beep & CPU Reset. Can be pushed while the unit is OFF Line to initiate an instant pick up. On HC-3 units without ComboLoks, this switch also initiates a 10-sec. tone output for nulling purposes if the unit is ONLINE.
- 18) H/U. Hang up control. When momentarily grounded, forces the HC-3 to hang up the line. If desired, a jumper wire may be installed at W1. That will force the coupler to stay off line as long as H/U is grounded. If W1 is not jumpered, the coupler will be ready to answer the next call, even if a constant low is applied to the H/U terminal however, momentarily re-grounding the terminal will always force a hang-up.

INSTALLATION / HYBRID NULL:

Once you've mounted your HC-3 and wired the power and Telco connections it is ready for the next to last step, the hybrid null adjustment. This is accomplished by monitoring the HC-3's audio output connection with a console input, an amplified speaker, an o'scope or even an analog AC voltmeter. Dial up the coupler then trigger the built-in tone generator (press S1 for stock HC-3). Adjust the Null Pot (VR1, beside the RJ-11 connector) pot for a visible or audible null. The null adjustment may have to be repeated if you change phone lines attached to the HC-3 or if your phone lines are modified, changed, or repaired by your telephone company. Once you've set the null, you can attach your outbound audio source (if desired) and your HC-3 is ready to use.

OPERATION

Your installed HC-3 will remain dormant until it either detects incoming rings or you press the manual pickup switch S1, or its remote control equivalent.

Unless the BEEP Enable jumper (J3) is removed, the unit will beep down the telephone line at pickup.

The Green ONLINE LED stays lit for the duration of the call.

The caller can stay ONLINE as long as desired.

When the caller hangs up - your HC-3 should hang up either instantly or within about twelve seconds depending on the variety of Central Office switching gear your telephone company uses. If it refuses to hang up at all, you may be in one of the very few areas where the local telephone company does not employ what is typically known as CPC, short for Calling Party Control. You can test for CPC by removing the telephone line from the HC-3. If it hangs up reliably each time the line is disconnected, but won't hang up when it's connected to the phone line, then you're probably not getting CPC from your telephone co. If this occurs see Appendix A near the end of the manual for your options.

If you'd like to slave a relay on the OPTO O/C output or the callend output, remember that the emitters of Q3 (the opto's slaved transistor) and Q4 (callend) are tied to the HC-3's ground buss. Please use a reverse biased "snuffer diode" to protect the transistors from inductive kick.

TROUBLESHOOTING

If you are having trouble with your HC-3 please try to characterize the trouble before calling for tech support. Things to check:

<i>Observations:</i>	<i>Likely Cause</i>
NO Power LED (the red LED that sticks through the flat front panel).	Power supply dead. (Measure DC output of LM7805.) LED is bad.
Unit doesn't pick up after prescribed number of rings and ring LED doesn't light during rings.	Optocoupler U1 dead.
Unit picks up then immediately hangs up.	1/2 of U1 dead. Your telco Voltage is low.
Unit refuses to hang up.	You're on a PBX or telco line without CPC. See above on this page for details.
Ring/Online (green) LED not on, but unit picks up phonenumber anytime phone line is connected.	MOV shorted or K1 stuck -try tapping K1.

RINGS, BEEPS, AND SUCH

Changing which ring the HC-3 answers on is accomplished by moving the ring set jumper J1. The unit comes factory set for two rings. The five positions of J1 are marked 1-5. If the jumper is completely removed the unit will answer after ten rings. *The microprocessor reinitializes at the end of each call, so changes will not take effect until the **next time** the coupler hangs up. You can also reinitialize the processor by pulling the power for a few seconds after changing this jumper.*

To disable the HC-3's beep upon pickup, remove the beep enable jumper, labelled "Beep En J3," near the green LED.

To make the HC-3's auxiliary relay (K2) operate in a latched fashion (for the duration of the call) remove the "Aux L/M" jumper located next to U3 (the microprocessor). The Aux relay is factory set to operate in momentary mode at pickup.

If you intend to monitor the line-current / ring optocoupler's open-collector output AND control when it is presented to the microprocessor for signalling, remove Jumper J4, beside the RJ-11 jack. For normal Autocoupler operation this jumper MUST be left ON.

Changing the jumpers requires removing the top cover of the HC-3's enclosure.

To remove the top cover of the HC-3, first remove the optional rack mount panel (if so equipped) then press the Red and Green LEDs on the front panel in with your fingertip so the fronts of their lenses are even with the front of the case. Next remove the four (keps) nuts from the case and remove the top half. You now have access to the main board.

The board layout on page four gives you the locations of the jumper positions noted above, and more.

Reassembling the case: Gently pull the two, front-panel LEDs straight forward about 1/4" so the flat edges (where the leads come out) are roughly even with front edge of the bottom plate. Next angle the fronts of the leds down just slightly, somewhere around 30 degrees. Place the top of the box on with the front angled down to roughly match the angle of the leds and position it so the LEDs enter their round holes in the front edge of the box. Gently move the box-top into position over the front two 6-32 studs (at each side of the bottom plate) and lower the top onto the front studs first then the back. With just a little luck your LEDs will have made it through the front panel with no problem. If one or both of them don't quite make it through, take a long, thin, regular screwdriver and gently push them through from behind; you can do this with the top on. Replace the (keps) nuts that hold the top in place and reattach your rack plate, if so equipped.

APPENDIX A

What can I do if the phone company does not provide an end of call line reversal (CPC)?

Depending upon the type of service that you intend to use the coupler for, there are a few options:

1. If your telephone line does provide dial-tone or a busy (aka reorder) signal after the calling party hangs up the easiest and best cure is to buy a CP-1 call progress decoder board and install it in your HC-3. The CP-1 "listens" to the incoming audio stream and detects the presence of dial-tone or busy/reorder signals. When they are detected the CP-1 forces the HC-3 to hang up.
2. If you are going to use the coupler as an outgoing message center (concert line, etc.) and if the associated device that has an end of message (EOM) output (like the secondary or tertiary tones of many cart decks) you could use those outputs to force the coupler to hang up the phone. If you don't have an EOM output available, you may still be able to provide the same function with the device's ready output. A momentary or latching closure can be used between the H/U terminal and ground to force a hang-up.
3. If your messages are all of the same length, you can build a simple timer from a 555 or other device which will output a +5V pulse (referenced to the pcb ground) to the 'c' pin of the ring thru terminals after the appropriate interval.

OTHER OPTIONS AVAILABLE

You can rack mount your HC-3 with the RM-01 from CircuitWerkes. A dual (side by side) rack mount, the RM-02, is also available for mounting one or two HC-3s in one rack unit.

The ComboLok option provides you with secured access and two sets of form-c contacts that are activated only after the unit is unlocked with the user-settable password. Field retrofit with the ComboLok option requires some simple component soldering and the replacement of the microcontroller (U3).

Contact your CircuitWerkes dealer for pricing on these options.

REPAIR OR SERVICE INFORMATION

In the event of the need for service or repair, call CircuitWerkes at (352) 335-6555 for a Return Merchandise Authorization number (RMA). Then carefully package the unit along with a note of the problem and send it to the address below. Clearly indicate the RMA number on the outside of the box. We cannot accept returns without an RMA. Be sure to include a note with a brief description of the problem, your address (not a PO box), telephone number and best time to call.

CircuitWerkes

ATTN: CUSTOMER SERVICE DEPT.
2805 NW 6TH STREET
GAINESVILLE, FL 32609, USA

CIRCUITWERKES LIMITED WARRANTY

This product is warranted against defects for two years from date of purchase from CircuitWerkes and CircuitWerkes authorized distributors. Within this period, we will repair it without charge for parts and labor. Proof of purchase-date required. Warranty does not cover transportation costs, or a product subjected to misuse, accidental damage, alteration (except as authorized by CircuitWerkes), improper installation, or consequential damages.

Except as provided herein, CircuitWerkes makes no warranties, express or implied, including warranties of merchantability and fitness for a particular purpose. Some states do not permit limitation or exclusion of implied warranties; therefore, the aforesaid limitation(s) or exclusion(s) may not apply to the purchaser. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.